

INSTRUCTION SHEET

Buell
AMERICAN MOTORCYCLES

-J00968

Kit Number 50498-97Y

REV. 8-11-97

BILLET ALUMINUM FOOTPEGS

General

These footpegs fit all Buell models and Pro Series Billet Aluminum Rear Set Controls. This kit contains:

QTY	PART NO.	DESCRIPTION
1	50496-97Y	Footpeg, Right
1	50497-97Y	Footpeg, Left
2	50912-72	Spring Washer
2	6351Y	3/8-16x1.5 SHCS-SS
2	7665Y	3/8-16 Lock Nut SS

NOTE

A Service Manual for your motorcycle is available from your Buell Dealer.

Removal

1. Locate the footrest on both sides of the motorcycle.
2. Remove the locknut and bolt from each footrest mount.

Installation

1. Mount both Footpegs to the respective footrest mounts using the furnished bolts, spring washers, and nuts.
 - Tighten bolts so footpegs are tight, but not binding.

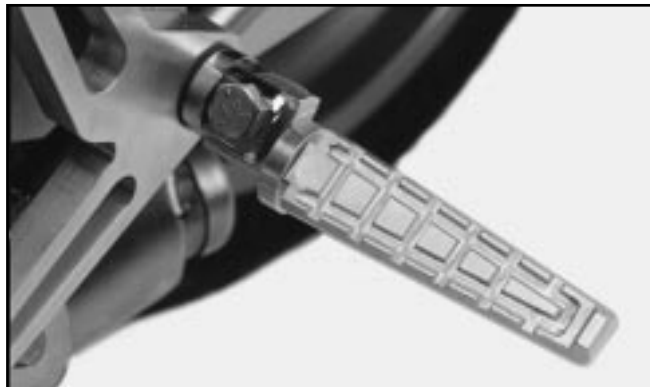


Figure 1. Installed billet aluminum footpeg